


INSTALLATION INSTRUCTIONS

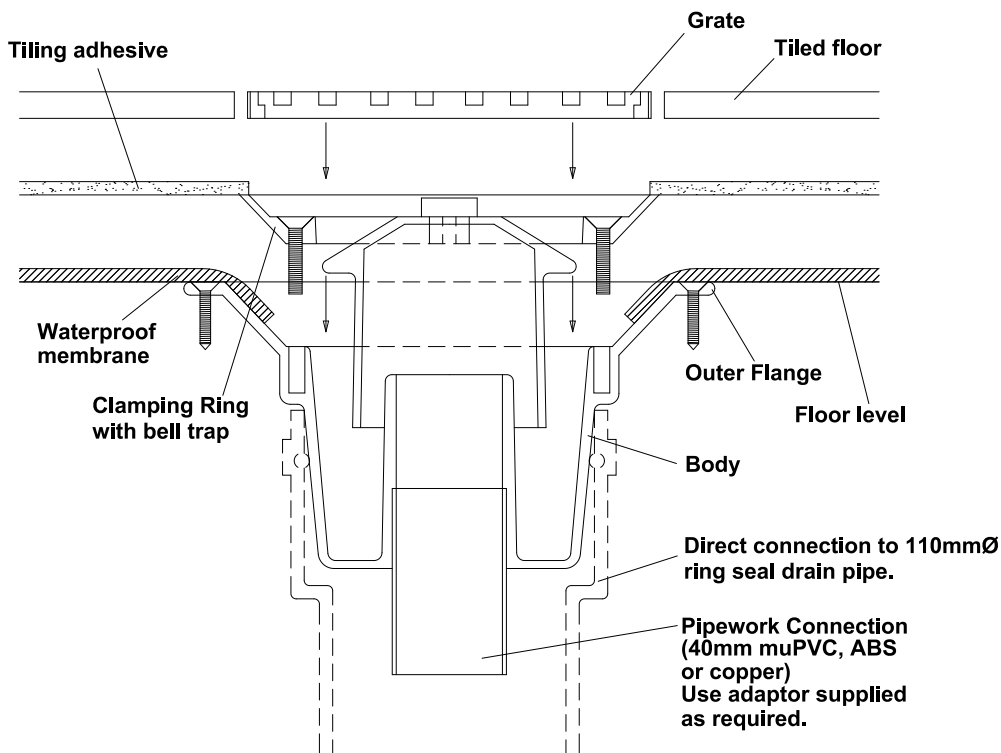

1. Recess the body "outer flange" into floor surface so the top is level with the structural floor.

2. Connect 40mmØ waste pipe to outlet using adapter supplied as required or direct to 110mmØ ring seal drain connector.

3. Screw "outer flange" to the structural floor with countersunk screw via 4 holes provided.

4. Dress the waterproofing membrane into the dish of the outlet body. For sheet membranes use a silicone sealant to form a watertight seal between the outlet body and sheet material.

5. Secure the "clamping ring" and "bell trap" over the waterproofing membrane with screws provided, ensuring the membrane is fully clamped into position.

6. Apply tile adhesive around the circular outlet opening and set the square "tile grate" over the outlet body, inline with the required tile grid.

Part code: DF220
DF230
DF231



MARLEY ALUTEC LTD

Unit 1 (G-H) Viking industrial Park,
Hudson Road, Elms Farm Industrial Estate,
Bedford MK41 0LZ

Tel: 01234 359438 Fax: 01234 357199

**Waterproof
membrane**

**Clamping Ring
with bell trap**

Outer

Body

**Direct
ring s**

**Pipew
(40mm
or cop
Use a
as rec**

