


TYPICAL TWO WAY OUTLET INSTALLATION INSTRUCTIONS

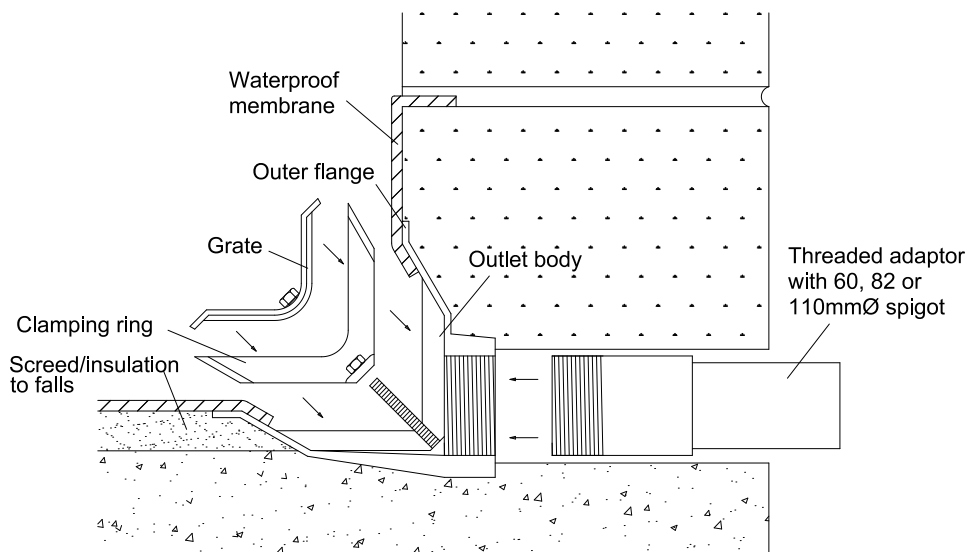

1. Connect threaded adaptor to the outlet, sealing with PTFE tape or silicone.

2. Recess the body into the slab and brickwork so that "outer flange" is level with both surfaces.

3. Dress the waterproofing membrane into the dish of the outlet body. For sheet membranes use a silicone sealant to form a watertight seal between the outlet body and sheet material.

4. secure "clamping ring" over the waterproofing membrane using the bolts provided, ensuring the membrane is fully clamped into position.

5. Secure "grate" to "extension ring" using bolts provided.



MARLEY ALUTEC LTD

Unit 1 (G-H) Viking Industrial Park,
Hudson Road, Elms Farm Industrial Estate,
Bedford MK41 0LZ

Tel: 01234 359438 Fax: 01234 357199

